



Snow Plow Preventive Maintenance

- Change hydraulic fluid
 - At least once per year, depending on usage
 - Disconnect lift & angle hoses
 - Collapse cylinders to drain all old fluid
 - Refill with Sno-Pro TM hydraulic fluid (appx 1.5 qts)
- Remove A-Frame cover to check all hoses & fittings for chaffing or leaks; tighten or replace as needed
- Check lift & angle cylinders at glan nut for possible leaks or pitting
- Grease all moving parts, latch handles, trip frame hoop, receiver forks, etc.
- Apply dielectric grease on all electrical connections
- Test all plow operations
- Check truck suspension for proper weight distribution
- Test all electrical functions: lights, directionals, controller, etc.
- Inspect all frame kit hardware; tighten & replace, as needed
- Inspect cutting edge for wear, replace bolts, as needed
- Inspect skid shoes for wear
- Inspect structure for rust; sand & re-paint, as needed
- Replace all safety & identification decals, as needed