

TRAILERWARE™

PREMIUM WALL PROTECTION



PROFESSIONAL
LOOK

STAIN
& OIL
RESISTANT

LOOKS AND
FEELS LIKE
CARPET

EASY
CUSTOM
INSTALL

LIMITED LIFETIME
WARRANTY

Whether it's with a toy or a vehicle, loading and unloading your trailer should be painless. In a tight space, dings, rubs, scuffs – to both you and your vehicle, are likely. While you may not be able to control what happens on the course or track, you CAN control what happens inside your trailer.



Why TrailerWare?


TrailerWare is an impact absorbing, ¼" thick foam insulated barrier that looks and feels like carpet. It reaches a full height of 48" on the trailer walls, and easily trims to fit around any outlets, cabinets or accessories. It's stain resistant to harsh chemicals, oil and water, cleans up easily and won't mold or mildew. TrailerWare is tough, and can stand up to rugged conditions. Protect what you're loading into your trailer, and keep it looking professional.

★ MADE IN THE **USA**



Most trailers arrive pre-equipped with luan, plywood or aluminum walls. While durable, these surfaces present a hard surface with potential to damage cargo.

TrailerWare will not only protect your cargo, but adds a professional look to any trailer. The 24-foot Premium Kit (above) covers the side walls, front bulkhead, wheel wells and beaver tail.

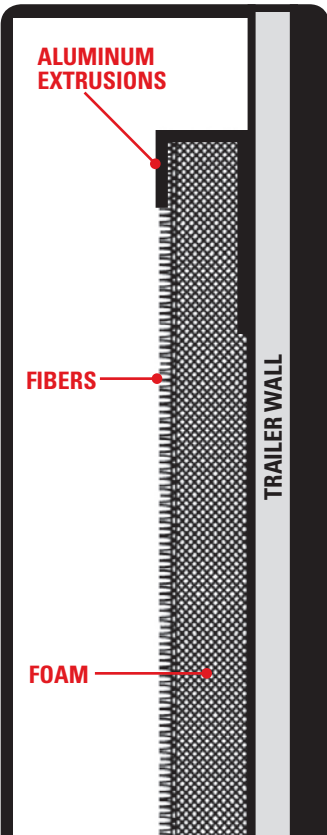

PROTECT
1/4" thick closed cell foam bonded to 100% polypropylene fibers.



PROFESSIONAL APPEARANCE

TrailerWare is made of durable 100% polypropylene. With normal use, standard walls will become scratched and stained. TrailerWare maintains a fresh look with virtually no maintenance.



THICK, IMPACT ABSORBING BARRIER

Prevents dings and scratches, bumps and bruises. Makes climbing in and out of your vehicle easier. NEVER again worry about banging your car door into the trailer wall.



CUSTOM FIT

TrailerWare is a great option to customize your trailer. It can be tailored to work around switches, cabinets and other accessories.



INSTALL

TrailerWare installation is easy: 1. Measure 48" up from bottom. 2. Use supplied screws to attach aluminum edge trim. 3. Apply spray adhesive to the back of covering and trailer walls. 4. Trim as needed.



EASY INSTALLATION

Both premium and standard kits include the wall covering material, aluminum extrusion rail (shown) and spray adhesive for installation.



SCAN QR CODE TO VIEW INSTALL VIDEO.



ULTRA TOUGH

TrailerWare is water and stain resistant. Its easy to maintain and holds up to harsh chemicals. It can be hosed off, vacuumed or swept as needed.

TRAILERWARE STAYS PUT. PHOTO IS FOR CHEMICAL DEMONSTRATION ONLY.




SIZED TO FIT

TrailerWare is offered in four popular sizes to meet your needs.
 10-14-foot
 15-24-foot
 25-28 foot
 29-32-foot



48-inch

Each TrailerWare Kit is designed to cover an optimum height of 48" along the length of the trailer.

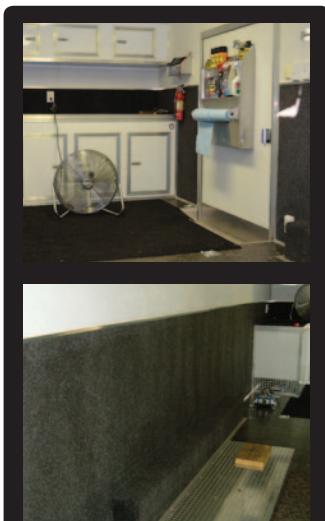


CUSTOMIZE

Every trailer is different. TrailerWare can be modified to fit around cabinets, switches and outlets.

TrailerWare is compatible with any brand or make of car hauler or cargo trailer and is offered in four popular sizes:



PREMIUM KITS

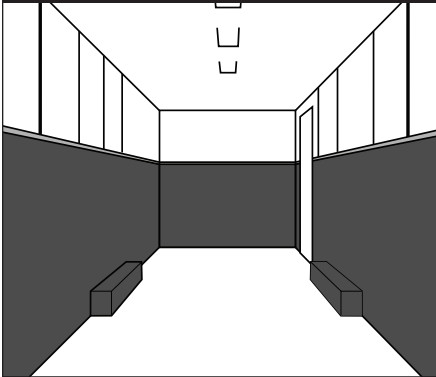

PREMIUM KIT provides enough material and trim for side walls, front bulkhead, beaver tail and wheel wells.

10 TO 14-FOOT
PART NO: 8010140

36 linear feet of 48-inch high TrailerWare liner material (144 total square feet)
40 feet of extrusion rail (contains 5 – 8-foot rails)
4 spray cans of hi-bond adhesive

15 TO 24-FOOT
PART NO: 8010240

66 linear feet of 48-inch high TrailerWare liner material (264 total square feet)
64 feet of extrusion rail (contains 8 – 8-foot rails)
7 spray cans of hi-bond adhesive


25 TO 28-FOOT
PART NO: 8010280

74 linear feet of 48-inch high TrailerWare liner material (296 total square feet)
72 feet of extrusion rail (contains 9 – 8-foot rails)
8 spray cans of hi-bond adhesive

29 TO 32-FOOT
PART NO: 8010320

82 linear feet of 48-inch high TrailerWare liner material (328 total square feet)
80 feet of extrusion rail (contains 10 – 8-foot rails)
9 spray cans of hi-bond adhesive

STANDARD KITS

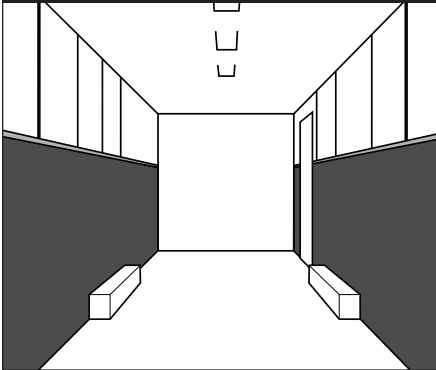

STANDARD KIT provides enough material and trim for side walls only.

15 TO 24-FOOT
PART NO: 8010241

48 linear feet of 48-inch high TrailerWare liner material (192 total square feet)
58 feet of extrusion rail (contains 7 – 8-foot rails)
6 spray cans of hi-bond adhesive

25 TO 28-FOOT
PART NO: 8010281

56 linear feet of 48-inch high TrailerWare liner material (224 total square feet)
64 feet of extrusion rail (contains 8 – 8-foot rails)
7 spray cans of hi-bond adhesive

29 TO 32-FOOT
PART NO: 8010321

64 linear feet of 48-inch high TrailerWare liner material (256 total square feet)
72 feet of extrusion rail (contains 9 – 8-foot rails)
8 spray cans of hi-bond adhesive

ACCESSORIES

PART NO:	DESCRIPTION
8010100	TrailerWare Upgrade Kit for Bulkhead & Wheels Wells
8010050	TrailerWare Upgrade Kit for Wheels Wells
TW4825T	TrailerWare Wall Covering (linear foot)
3774	8-Foot Extrusion Rail
126530BG	Hi Bond Adhesive (13-oz can)
6N50TXPZ	Screw Kit (Bag of 50)

TRULY CUSTOMIZABLE

TrailerWare is sold as a complete kit or as individual pieces, depending on your needs.



PART NO: TW01 REV. 1.12

